Vacmaster®

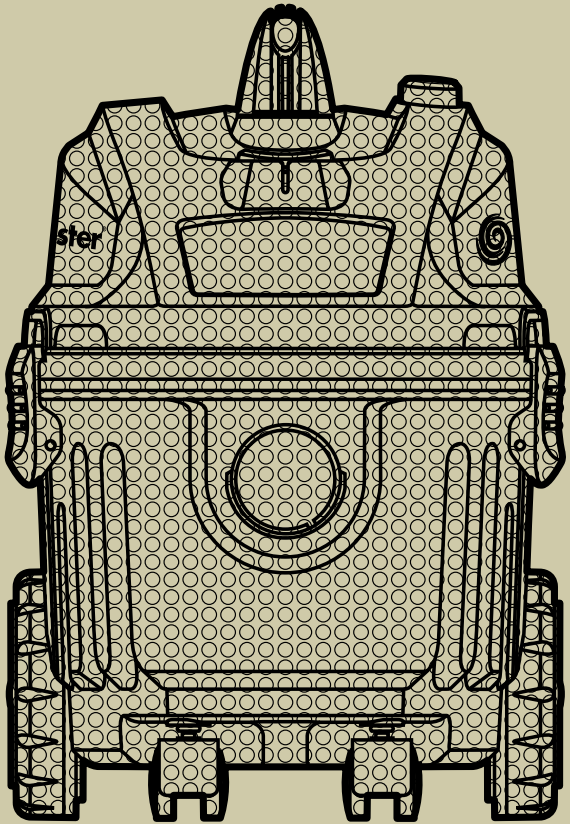

GB **VF1515HJ 170300** WET AND DRY VACUUM CLEANER

NO **170300 STØVSUGER VF1515HJ VÅT/TØRR**

WET & DRY

VACUUM CLEANER

IPX4

1500W / 15L / VF1515HJ 170300

TABLE OF CONTENTS

SECTION	PAGE
Warranty	3
Safety Instructions and Warnings	3
Specifications	4
Unpacking and Checking Carton Contents	4
General Assembly Instructions	5
Switching On/Off	6
Dry Vacuum Operation	6
Wet Vacuum Operation	7
Maintenance	8
Installing & Cleaning Cartridge Filter	8
Installing & Cleaning Foam Sleeve Filter	9
Troubleshooting	9
Parts List - Exploded View	10

Thank you for purchasing this Vacmaster® wet/dry vacuum cleaner. Feel confident that with Vacmaster® you are obtaining a high quality product engineered for optimal performance. This vacuum is capable of picking up liquids and dry materials.

FOR YOUR SAFETY CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS.

WARRANTY

Vacmaster® takes pride in producing a high quality, durable product. This Vacmaster® product carries a limited two (2) year warranty against defects in workmanship and materials from date of purchase under normal household use. If product is to be used for commercial, industrial or rental use, a 90 day limited warranty will apply. Warranty does not apply to defects due to direct or indirect abuse, negligence, misuse, accidents, repairs or alterations and lack of maintenance. Please keep your receipt as proof of purchase. This warranty gives you specific legal rights, and you may have other rights, which vary form state to state.

SAFETY INSTRUCTIONS & WARNINGS

- This appliance complies with the compulsory safety regulations for electric equipment. However, improper use can be harmful to people and property. Please read these operating instructions through carefully and completely before switching the appliance on. Keep the operating instructions, the guarantee certificate, the receipt, as well as the packaging and packaging material if at all possible.
- This appliance is designed solely for use in the private sector and for the designated purpose. The appliance is not suitable for commercial use. Don't use the appliance outdoors (unless it has been specifically designed for use outdoors). Don't subject the appliance to heat, direct sunshine or very high moisture (e.g. rain). Never immerse the appliance in liquids and be aware of sharp edges that may damage it.
- This wet/dry vacuum cleaner may only be used and kept in a private home.
- The appliance is designed to vacuum up materials that are not hazardous to your health and that are not flammable.
- Never hold the connectors in front of your face (Especially your eyes, ears, etc.) Never direct the nozzle towards persons or animals.
- Only use the appliance for its designated purpose-se. Any other types of use are at your own risk and are possibly dangerous.
- Other uses and unattended operation are not allowed.
- The manufacturer cannot be made responsible for damages that are caused by improper use or incorrect operation.
- Connect the appliance only to a 230 volt alternate-ting current receptacle. The receptacle should be protected by a 16-amp fuse.
- Make sure that the correct dust bag has been inserted securely in its holder before using the appliance. The wrong dust bag or incorrectly installed dust bags can cause damage to the appliance and cause the guarantee to become void.
- If the power cord is damaged, it must be completely replaced along by customer service.
- Do not vacuum up ashes, hot coals or the like, large fragments of glass and sharp objects.
- Don't vacuum up any toner dust, which is used in printers and copiers for example, because it is electrically conductive. In addition, it is possible that it will not be completely filtered out by the filter system of the wet/dry vacuum cleaner and can be released into the air via the exhaust fan.
- Never vacuum asbestos or asbestos dust.
- Never vacuum flammable or poisonous liquids like petrol, oil, acids, or other volatile substances.
- Don't vacuum up liquids that are hotter than 60ºC or any poisonous or flammable dusts.
- Never lay the appliance on its side. Pay particular attention to a horizontal position and adequate stability on stairs.
- Always unplug the appliance after use and before cleaning or changing the filters or accessories.
- Only trained specialists may make repairs on electric equipment. Improper repairs could result in considerable danger to the user.
- Do not store the appliance directly beside a hot oven or radiator.
- Children, disabled persons, and the aged are often not aware of the dangers that can result from handling electric appliances. The above-mentioned persons and untrained persons must never work with this electrical appliance.
- When cleaning or removing the appliance, al-ways switch it off. Pull the plug out of the receptacle, if you are not going to use the appliance for an extended period of time. Never pull on the cable to unplug the appliance, rather pull on the plug itself. Also, remove any special accessories from the appliance.
- Always keep the appliance clean. Don't use any solvents or cleaners that contain solvents for cleaning.
- Never leave the appliance switched on unit-tended. If you leave the work area, switch the appliance off or unplug it from the receptacle (don't pull the cord, but use the plug).
- In order to protect children from electric household appliances, make sure that the cable can't cause children to stumble and don't give children access to the

appliance.
- Never use the appliance when you are under the influence of medication, alcohol or drugs, if you are currently under medical care, or if you are tired.
- Check the appliance and the power cord regularly for any possible damage. Don't use damaged appliances.
- Don't try to repair the appliance yourself. Always use an authorized technician for repairs. Always have faulty power cords replaced immediately by the manufacturer or a qualified electrician. Use the same type of cable in order to prevent any danger of electric shock and injury.
- Only use original spare parts and accessories. None approved parts or third-party accessories may be a possible source or danger and cause the guarantee to become void.
- Check the float often.
- If you notice liquid leaking from your appliance, switch it off immediately and unplug it.
- Don't put the appliance in water. Make sure that water is not spilled on the appliance.
- When disposing of the wastewater, make sure that you observe any legal regulations.
- Only store the appliance in a safe and dry location-on outside the reach of children.
- Please also pay particular attention to the follow-wing "Special Safety Information".

SPECIAL SAFETY INFORMATION

- Never vacuum up hot ashes or pointed or sharp objects.
- Never use the appliance in damp rooms.
- Don't use the appliance without a dust bag (an exception is wet vacuuming). Make sure that the dust bag is inserted into the appliance correctly.
- When using the appliance, make sure that no hair, clothing, or members are drawn in.
- Keep the vacuum cleaner away from heat sources such as radiant heaters, ovens, and so on.

DISPOSAL INFORMATION

The appliance contains electric and electronic components and may not be disposed of as household garbage. The local and currently applicable legislation must be observed unconditionally.

SPECIFICATIONS

Motor:	230V-50Hz
Container:	15L
Watt:	1500W
Filter-Dry:	PET Cartridge Filter & Dust Bag
Filter-Wet:	Foam Sleeve Filter

UNPACKING AND CHECKING CARTON CONTENTS

Remove entire contents of carton. Check each item against the carton contents list.

Carton Contents List

Key	Description	QTY
A	Vac Assembly	1
B	Hose	1
C	Car Nozzle	1
D	Crevice Tool	1
E	Round Dust Brush	1
F	Floor Combo Nozzle	1
G	Cartridge Filter	1
H	Dust Bag	1
I	Foam Sleeve Filter	1
J	Rear Caddy	1
K	Extension Wand	3
L	HEPA Filter Door	1
M	HEPA Filter	1
N	Casters	2
O	Rear Wheels	2
P	Handle	1
Q	Bag with 4 Screws	1
R	Operator's Manual	1

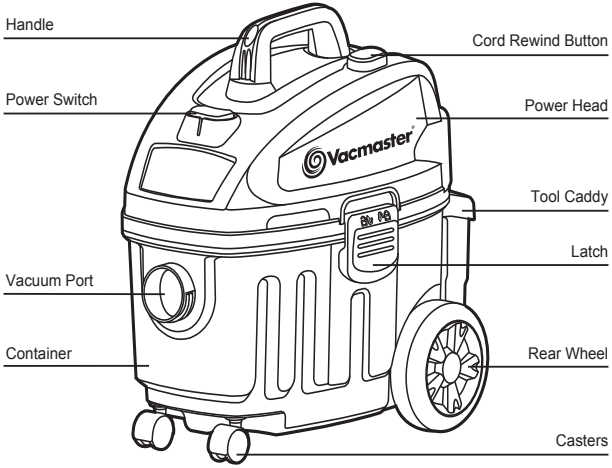

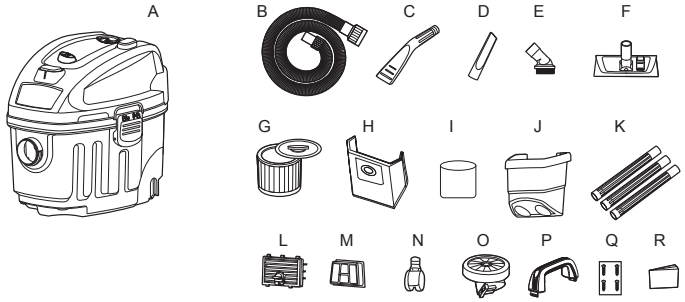

GENERAL ASSEMBLY INSTRUCTIONS

WARNING: DO NOT PLUG IN POWER CORD TO POWER OUTLET, MAKE SURE PLUG IS DISCONNECTED BEFORE ASSEMBLING THE WET/DRY VAC

UNPACKING YOUR WET/DRY VACUUM & GENERAL ASSEMBLY

UNPACKING YOUR WET/DRY VACUUM & GENERAL ASSEMBLY

1. Verify that the power cord is disconnected from the outlet. (fig. 1)
2. Undo the latches. (fig. 2)
3. Lift the power head off the container. (fig. 3)
4. Remove the contents from inside the container, make sure you have all contents as listed on page 5. (fig. 4)
5. Turn the container upside down and insert the two casters (2) into the slots on the front side of the container. Apply downward pressure until the casters snap into place. (fig. 5)
6. Slide the rear wheels into the slots making sure to match the wheel number to the corresponding number on the wheel slot and use screws to secure them. Do not over tighten the screw. (fig. 6 & 7)
7. Your vacuum comes ready for dry vacuum cleaning. If cartridge filter is not installed refer to page 9 for filter installation. (fig. 8 & 9)
8. For wet vacuum cleaning, install the supplied foam filter. (fig. 10) See page 10 for filter installation.
9. Place the power head back on the container, aligning the top section with the latches, and lock into place. (fig. 11)
10. Insert the handle into the slots located on the top of the power head and secure it with the screws provided. Do not over tighten the screw. (fig. 12)
11. Hang the tool caddy to the hooks on the rear of the vacuum. (fig. 13)
12. Secure the large end of the hose onto the vacuum port on the container and screw into place. (fig. 14)
13. Choose the desired accessories and extension wands and push onto the hose. (fig. 15)

POLARIZED PLUG

To reduce the risk of electrical shock, this appliance has a polarized plug (one with the blade wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Double insulation ⧈ eliminates the need for the three wire grounded power cord and grounded power supply system.

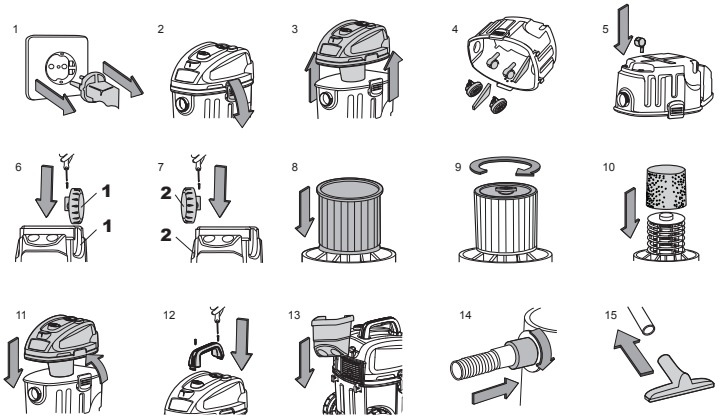

DRY-VACUUM OPERATION

WARNING: BE SURE TO READ, UNDERSTAND, AND APPLY INFORMATION, ENTITLED 'SAFETY INSTRUCTIONS & WARNINGS'. DO NOT VACUUM IN AREAS WITH FLAMMABLE GASES, VAPORS, OR EXPLOSIVE DUSTS IN THE AIR. FLAMMABLE GASES OR VAPORS INCLUDE BUT ARE NOT LIMITED TO; LIGHTER FLUID, SOLVENT TYPE CLEANERS, OIL-BASE PAINTS, GASOLINE, ALCOHOL OR AEROSOL SPRAYS. EXPLOSIVE DUSTS INCLUDE BUT ARE NOT LIMITED TO; COAL, MAGNESIUM, GRAIN OR GUN POWDER. TO REDUCE THE RISK OF HEALTH HAZARDS FROM VAPORS OR DUST, DO NOT VACUUM TOXIC MATERIALS.

1. Verify that the power cord is disconnected from the outlet. (fig.1)
2. In order to prepare your vacuum for dry vacuuming, verify that the cartridge filter is securely mounted. Make sure the filter is pushed in until it stops against the power head. (fig. 2) (Your Wet/Dry Vac comes with the cartridge filter pre-installed, if not see page 9 for installation instructions.)
3. Place filter retainer on top of cartridge filter and tighten by turning the retainer handle clockwise. (fig. 3)
4. Optional, for improved dust filtering, fit collection dust bag flange onto the inlet stub, taking care not to damage the bag. (fig. 4)
5. Place the power head back on the container, aligning the top section with the latches, and lock into place. (fig. 5)

OPERATING INSTRUCTIONS: DRY VACUUMING

6. Insert the locking end of the hose into the vacuum port on the power head and screw in place. Push the desired extension wands or attachments onto the free end of the hose. (fig. 6)
7. Verify that the switch is in the 'O' OFF position before plugging the power cord into the outlet. (fig. 7 & 8)
8. Turn the motor on by flipping the switch to the 'I' ON position. (fig. 9)
9. Once you have completed vacuuming, flip the switch to the 'O' OFF position and unplug the power cord from the outlet. (fig. 10 & 11)
10. To rewind the cord, hold on to the plug and press the cord rewind button. Do not allow plug to whip when rewinding. (fig. 12)

O = OFF I = ON

DO NOT USE THE CARTRIDGE FILTER FOR LIQUID VACUUMING.

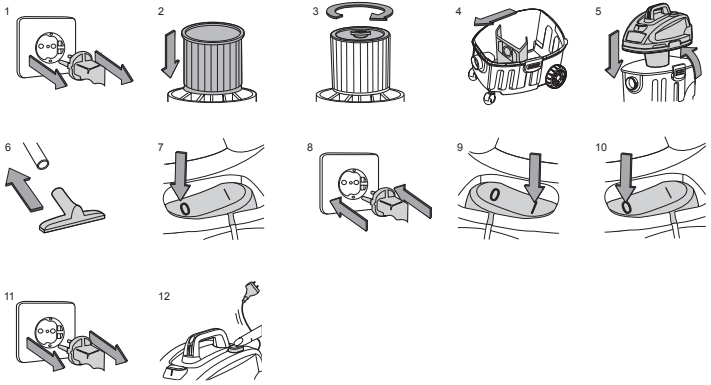

WET-VACUUM OPERATION

WARNING: BE SURE TO READ, UNDERSTAND, AND APPLY INFORMATION, ENTITLED 'SAFETY INSTRUCTIONS & WARNINGS'. DO NOT VACUUM IN AREAS WITH FLAMMABLE GASES, VAPORS, OR EXPLOSIVE DUSTS IN THE AIR. FLAMMABLE GASES OR VAPORS INCLUDE BUT ARE NOT LIMITED TO; LIGHTER FLUID, SOLVENT TYPE CLEANERS, OIL-BASE PAINTS, GASOLINE, ALCOHOL OR AEROSOL SPRAYS. EXPLOSIVE DUSTS INCLUDE BUT ARE NOT LIMITED TO; COAL, MAGNESIUM, GRAIN OR GUN POWDER. TO REDUCE THE RISK OF HEALTH HAZARDS FROM VAPORS OR DUST, DO NOT VACUUM TOXIC MATERIALS.
WARNING: DO NOT PLUG IN POWER CORD TO POWER OUTLET, MAKE SURE PLUG IS DISCONNECTED BEFORE ASSEMBLING THE WET/DRY VAC

1. Verify that the power cord is disconnected from the outlet. Verify that the container is clean and free of dust and dirt. (fig. 1)
2. Remove cartridge filter and the dust collection bag, then carefully install the foam sleeve filter over the filter cage and place the power head back on the container. (fig. 2) See filter installing instructions on page 10.

DO NOT USE THE CARTRIDGE FILTER FOR LIQUID VACUUMING.

OPERATING INSTRUCTIONS – WET VACUUMING

3. Fit the desired extension wands or nozzle to the vacuum hose. (fig. 3)
4. Verify that the switch is in the 'O' OFF position before plugging the power cord into the outlet. (fig. 4 & 5)
5. Turn the motor on by flipping the switch to the 'I' ON position. (fig. 6)
6. After use, flip the switch to the 'O' OFF position and unplug the power cord from the outlet. (fig. 7 & 8)
7. Empty the container into a suitable receptacle or drain. (fig. 9)
8. To rewind the cord, hold on to the plug and press the cord rewind button. Do not allow plug to whip when rewinding. (fig. 10)

IMPORTANT! When vacuuming large quantities of liquids, do not immerse the nozzle completely in the liquid; leave a gap at the tip of the nozzle opening to allow air inflow. The machine is fitted with a float valve that stops the suction action when the container reaches its maximum capacity. You will notice an increase in motor speed. When this happens, turn off the machine, disconnect from power supply, and drain the liquid into a suitable receptacle or drain. To continue vacuuming, refit the container with power head. After wet vacuuming, turn the machine off and remove plug from power supply. Empty the container, clean and dry the inside and outside before storage.

REMEMBER! The foam filter must be removed after wet vacuuming, and a cartridge filter must be installed before dry vacuuming again.

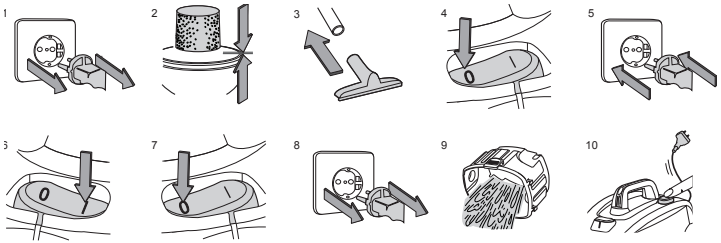

MAINTENANCE

1. Verify that the power cord is disconnected from the outlet. (fig.1)
2. Disconnect the hose from the vacuum. (fig. 2)
3. Undo the latches and remove the power head from the container. (fig. 3)
4. Clear all dirt or debris from the container and hose. (fig. 4)
5. Clean the foam filter by washing it with water and mild soap. (fig. 5)
6. Check the hose, attachments, and power cord to verify that they have not been damaged.

IMPORTANT! Clean or change the cartridge filter regularly for best performance. ALWAYS USE CARTRIDGE FILTER FOR DRY VACUUMING. If the machine is used with out the cartridge filter, the motor will burn out and the warranty will be voided. Always keep spare filters on-hand.

NOTICE! The filters included are made of high quality materials designed to stop small dust particles. The cartridge filter should be used for dry pick-up

only. A dry cartridge filter is necessary to pick up dust. If the cartridge filter is wet, it will clog quickly and be very difficult to clean. Handle the filter carefully when removing it for cleaning and replacing it. Check the filters for tears or small holes, a small hole can let dust pass through and out of the cleaner. Do not use a filter with holes or tears in it; replace it immediately.

WARNING! ALWAYS DISCONNECT THE PLUG FROM THE POWER OUTLET BEFORE REMOVING THE POWER HEAD FROM THE CONTAINER.



INSTALLING & CLEANING FILTERS

Installing Cartridge Filter

1. Verify that the power cord is disconnected from the outlet. (fig. 1)
2. Remove power head and place in upside down position.
3. Install the cartridge filter over the filter cage and carefully push filter in until it stops against the power head. (fig.2)
4. Place filter retainer on top of cartridge filter and tighten down by turning retainer clockwise. (fig. 3 & 4)

Removing and Cleaning Cartridge Filter

1. Unlock and remove the filter retainer by tuning retainer handle counter clockwise.
2. Carefully hold and pull the cartridge filter up for removal. (fig.5)
3. Clean the cartridge filter by gently tapping or brushing dirt off. Cleaning should not be done indoors in living areas. For optimal performance a new filter is recommended.
4. Install cleaned or new filter into place as instructed above in steps 1 - 3 of Installing Cartridge Filter.
5. Wet filters should be removed and allowed to air dry for 24 hours before installing onto the filter cage.



Installing and Cleaning HEPA Filter

1. Verify that the power cord is disconnected from the outlet. (fig.1)
2. Unlock the filter door by lifting the lock tab UP to the unlocked position and pull the door out. (fig. 2 & 3)
3. Remove the HEPA filter cartridge from the vacuum. (fig.4)
4. Clean filter by brushing dirt off. For optimal performance a new filter is recommended. (fig.5)
5. Install the cleaned or new filter into place. (fig. 6)
6. Insert the filter door tabs into the upper slots and lock the filter door into place. (fig. 7 & 8)

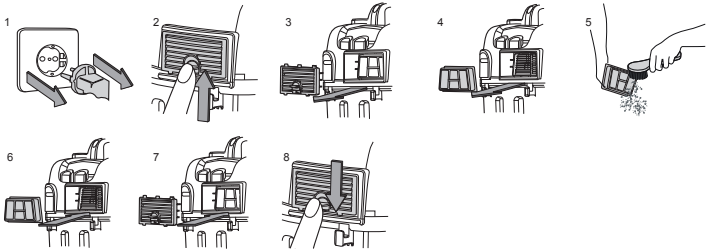

INSTALLING & CLEANING FOAM SLEEVE FILTER

Installing Foam Sleeve Filter

1. Verify that the power cord is disconnected from the outlet. (fig. 1)
2. Remove power head and place in upside down position. Follow instructions to remove cartridge filter.
3. Carefully slide foam sleeve filter down over the filter cage making sure the whole cage is covered. (fig. 2 & 3)
4. Replace the power head on to the container.

Cleaning Foam Sleeve Filter

1. With the removed power head in the upside down position, carefully remove foam sleeve filter. (fig. 4)
2. Use a mild soap and water solution to wash foam sleeve filter and rinse with clean water. (fig. 5)

3. Allow filter to air dry before installing and using again.

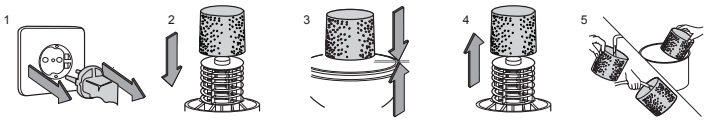

TROUBLESHOOTING

Symptom	Possible Causes	Corrective Action
Vacuum will not operate	1) No power supply.	1) Check power supply – cord, breakers, fuses.
	2) Faulty power cord.	2) Unplug and check the power cord. If damaged, have it repaired by a professional.
	3) Container full.	3) Empty container.
Dust comes out from motor cover.	1) The cartridge filter is missing or damaged.	1) Attach or replace cartridge filter.
Reduced efficiency and motor/speed vibration.	1) There is a blockage in the nozzle, hose, or the container inlet. The cartridge filter is clogged by fine dust.	1) Check nozzle, hose and container inlets for blockage. Take off the filter and clean it. Or install a new cartridge filter.

PARTS LIST -EXPLODED VIEW

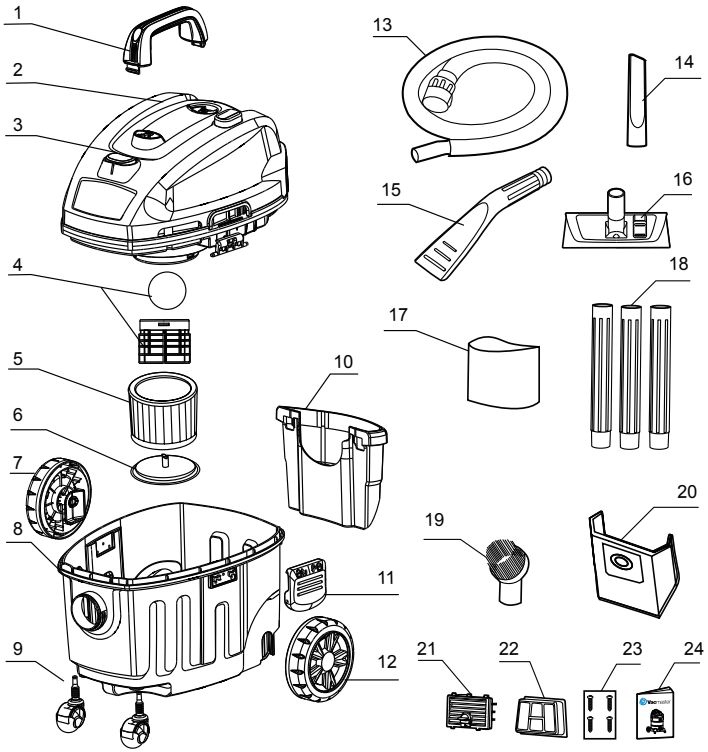

VF1515HJ Manual Parts List			
Key Number	**Drawing Number**	**Description**	**Quantity**
1	GD41BX.40.01	Handle	1
2	VH60P1.16.00	Power Head Assembly	1
3	WODQ10.01.12	Power Switch	1
4	VH60P1.17.00	Float & Filter Cage	1
5	FV9543.03.03	Cartridge Filter	1
6	FV9543.03.20	Filter Retainer	1
7	TVQTGL.17.00	Left Rear Wheel	1
8	VH60P1.20.01	Container	1
9	TVQTJL.08.00	Caster	2
10	FV9241.04.01	Tool Caddy	1
11	TVQTDK.11.00	Latch Assembly	2
12	TVQTGL.18.00	Right Rear Wheel	1
13	FV8804.01.00	Hose	1
14	FV8772.02.01	Crevice Tool	1
15	FV8774.01.01	Car Nozzle	1
16	FV8721.05.00	Floor Combo Nozzle	1
17	FV9502.06.01	Foam Sleeve	1
18	FV8903.01.01	Extension Wands	3
19	FV8773.01.00	Round Brush	1
20	FV9641.03.00	Dust Bag	1
21	VH60P1.11.00	HEPA Filter Door	1
22	VE01PW.10.30	HEPA Rated Filter	1
23	BOA2ZZ.39.01	Screws	4
24		Operator's Manual	1

INNHOLD

SEKSJON	SIDE
Garanti	12
Sikkerhetsinstrukser og advarsler	12
Tekniske data	13
Utpakking og sjekk av innhold	13
Generelle monteringsinstrukser	14
Slå av og på	15
Tørrsuging	15
Våtsuging	16
Vedlikehold	17
Installasjon og rengjøring av filterkassett	17
Installasjon og rengjøring av skumfilter	18
Feilsøking	18
Deleliste - diagram	19

Takk for at du kjøpte denne Vacmaster ® våt/tørrsugeren. Du kan være trygg på at du har skaffet et produkt av høy kvalitet som er utformet for optimal ytelse. Denne maskinen er i stand til å suge opp både væske og tørt materiale.

FOR DIN EGEN SIKKERHET BØR DU LESE ALLE INSTRUKSER I DENNE BRUKSANVISNINGEN NØYE, SLIK AT DU FORSTÅR DEM.

GARANTI

Vacmaster® er stolte av å levere slitesterke produkter av høy kvalitet. Dette Vacmaster®-produktet leveres med en begrenset 2-årig garanti som dekker defekter ved produksjon og materialer fra kjøpsdato, ved normal husholdningsbruk. Hvis maskinen brukes i kommersielt eller industrielt øyemed, eller leies ut, gjelder en begrenset 90-dagers garanti. Garantien dekker ikke defekter som skyldes direkte eller indirekte misbruk, feilaktig bruk, manglende vedlikehold, ulykker, reparasjoner eller endringer. Vennligst ta vare på kvitteringen som kjøpsbevis. Denne garantien gir deg spesifikke juridiske rettigheter; i tillegg kommer rettigheter fastsatt under norsk lov.

SIKKERHETSINSTRUKSER OG ADVARSLER

- Denne maskinen er utformet i samsvar med obligatoriske sikkerhetsforskrifter for elektrisk utstyr. Feilaktig bruk kan føre til skader på personer og eiendom. Vennligst les disse instruksene i sin helhet nøye før du starter maskinen. Ta vare på bruksanvisningen, garantibeviset og kvitteringen, samt emballasjen om mulig.
- Denne maskinen er kun beregnet brukt i privat sektor og til den type jobber den er utformet for. Maskinen egner seg ikke for kommersiell bruk. Maskinen må ikke brukes utendørs (hvis den ikke er spesielt utformet for utendørs bruk). Maskinen må ikke utsettes for sterk varme, direkte sollys eller høy fuktighet (for eksempel regn). Maskinen må aldri senkes i væske. Maskinen kan bli skadet av skarpe kanter.
- Denne våt/tørrsugeren skal kun brukes og oppbevares i private hjem.
- Maskinen er utformet for å suge opp materialer som ikke er helsefarlige eller brannfarlige.
- Hold aldri koblingene foran ansiktet (spesielt øyne eller ører). Rett aldri munnstykket mot personer eller dyr
- Maskinen må kun brukes som anvist i denne bruksanvisningen. Alle andre former for bruk er på eget ansvar, og kan være farlige.
- Maskinen må ikke brukes uansvarlig, og ikke etterlates uten tilsyn mens den er i bruk.
- Produsenten kan ikke holdes ansvarlig for skader som forårsakes av feilaktig eller uansvarlig bruk.
- Maskinen må kun kobles til et 230V vekselstrømsuttak. Kursen bør være beskyttet av en 16A-sikring.
- Pass på at riktig støvpose sitter som den skal i holderen før du tar maskinen i bruk. Bruk av feil støvpose eller feilaktig montert støvpose kan forårsake skader på maskinen, og oppheve garantien.
- Hvis strømledningen er skadet, må den byttes av autorisert elektriker.
- Sug aldri opp aske, varme kull eller lignende, heller ikke store glassbiter eller skarpe objekter.
- Sug ikke opp tonerstøv, som brukes i for eksempel printere og kopimaskiner, fordi det er strømledende. I tillegg er det mulig at slikt støv ikke vil bli helt filtrert ut av filtersystemet, slik at det blåses ut igjen via viften.
- Sug aldri opp asbest eller asbeststøv.
- Sug aldri opp brennbare eller giftige væsker, som bensin, olje, syrer, eller andre ustabile stoffer.
- Sug ikke opp væsker som er varmere enn 60°C, og heller ikke giftig eller brannfarlig støv.
- Legg aldri maskinen på siden. Pass særlig på at den er plassert horisontalt og stødig når du bruker den i trapper.
- Trekk alltid ut strømmen etter bruk, og før enhver form for rengjøring eller bytte av filter eller annet tilbehør.
- Bare autoriserte elektrikere kan utføre reparasjoner på elektrisk utstyr. Feilaktige reparasjoner kan medføre alvorlig fare for brukeren.
- Maskinen må aldri oppbevares ved siden av en varmeovn eller radiator.
- Barn, uføre og eldre er ofte ikke klar over farene ved håndtering av elektroverktøy. Utrente og uegnede personer må aldri bruke maskinen.
- Når du skal rengjøre eller vedlikeholde maskinen, husk alltid å slå av maskinen og trekke ut strømmen. Det samme gjelder hvis maskinen ikke skal brukes på en god stund. Trekk aldri i ledningen, trekk i selve støpselet. Ta av alt spesielt tilleggsutstyr før lagring.
- Hold alltid maskinen ren. Løsemidler eller rengjøringsmidler som inneholder løsemidler må aldri brukes.
- Etterlat aldri maskinen slått på uten tilsyn, Hvis du forlater arbeidsområdet, slå av maskinen eller trekk ut strømmen.
- For å beskytte barn mot farlig bruk av elektroverktøy, pass på at strømledningen ikke ligger slik at de kan snuble, og ikke gi barn tilgang til maskinen.
- Maskinen må aldri brukes av noen som er påvirket av medisiner, alkohol eller narkotiske stoffer, eller av noen som er svært trette.

- Sjekk maskinen og strømledningen jevnlig, og se etter eventuelle skader. En skadet maskin må ikke brukes.
- Prøv ikke å reparere maskinen selv. Kontakt alltid en autorisert elektriker når det er behov for reparasjoner. Skadde strømledninger må alltid byttes straks av produsenten eller autorisert elektriker. Bruk samme type kabel, for å forhindre faren for elektriske støt og skader.
- Bruk kun originale reservedeler og tilleggsutstyr. Deler som ikke er godkjent av produsenten, og tredjeparts tileggsutstyr, kan være en kilde til fare, og dessuten oppheve garantien.
- Sjekk maskinen ofte.
- Hvis du oppdager at det lekker væske fra maskinen, slå den straks av og trekk ut strømmen.
- Ikke senk maskinen i vann. Pass på at du ikke søler vann på maskinen.
- Når du kvitter deg med skittent vann, pass på at du følger gjeldende regler og forskrifter.
- Maskinen må lagres på et tørt og sikkert sted – utenfor rekkevidde for barn.
- Vær vennligst særlig oppmerksom på følgende spesiell sikkerhetsinformasjon.

SPESIELL SIKKERHETSINFORMASJON

- Sug aldri opp varm aske eller spisse eller skarpe objekter.
- Bruk aldri maskinen i fuktige rom.
- Bruk aldri maskinen uten en støvpose (med unntak for våtsuging). Pass på at støvposen sitter slik den skal.
- Pass på at hår, klær eller kroppsdeler ikke suges inn.
- Hold støvsugeren på trygg avstand fra varmekilder som radiatorer, ovner, osv.

INFORMASJON FOR AVFALLSHÅNDTERING

Denne maskinen inneholder elektriske og elektroniske deler, og skal ikke håndteres som vanlig husholdningsavfall. Gjeldende regler og forskrifter må følges uten forbehold.

TEKNISKE DATA

Motor:	230V-50Hz
Beholder:	15 Liter
Strøm:	1500W
Tørrfilter:	PET filterkassett og støvpose
Våtfilter:	Skumfilter

UTPAKKING OG SJEKK AV INNHOLD

Ta ut alt innhold av emballasjen. Sjekk at alle komponenter på listen under er med i pakken:

Del	Beskrivelse	Antall
A	Støvsuger	1
B	Slange	1
C	Bilmunnstykke	1
D	Sprekkmunnstykke	1
E	Rund støvbørste	1
F	Kombinert gulvmunnstykke	1
G	Filterkassett	1
H	Støvpose	1
I	Skumfilter	1
J	Holder for tilbehør	1
K	Forlengerrør	3
L	HEPA filterluke	1
M	HEPA filter	1
N	Forhjul	2
O	Bakhjul	2
P	Håndtak	1
Q	Pose med 4 skruer	1
R	Bruksanvisning	1

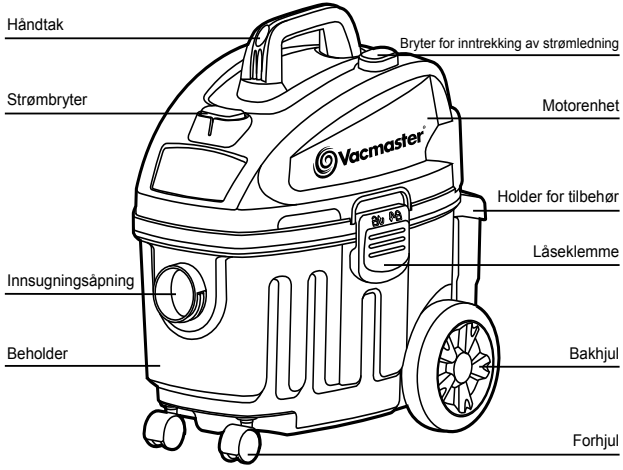

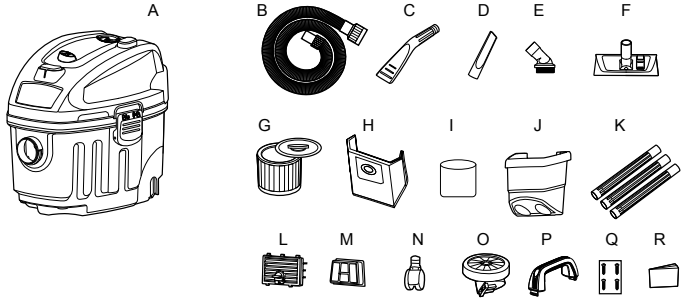

GENERELLE MONTERINGSINSTRUKSER

ADVARSEL: IKKE KOBLE TIL STRØM FØR DU SETTER SAMMEN STØVSUGEREN.

UTPAKKING OG MONTERING AV STØVSUGER

1. Pass på at strømledningen ikke er koblet til. (Figur 1)
2. Løsne låseklemmene. (Figur 2)
3. Løft motorenheten av beholderen. (Figur 3)
4. Ta ut delene som ligger inne i beholderen. Pass på at du har alle delene på delelisten. (Figur 4)
5. Snu støvsugeren opp ned, og skyv de to forhjulene inn i åpningene på fronten av beholderen. Klem ned til hjulene klikker på plass. (Figur 5)
6. Skyv hvert bakhjul inn i åpningen med tilsvarende nummer på bakenden av beholderen. Bruk skruene til å feste dem. Ikke stram for hardt. (Figur 6 & 7)
7. Støvsugeren kommer ferdigmontert for tørrsuging. Hvis filterkassetten ikke er montert, se instrukser på side 9. (Figur 8 & 9)
8. For våtsuging, installer skumfilteret. (Figur 10) Se instrukser på side 10.
9. Sett motorenheten tilbake på beholderen slik at den passer med låseklemmene, og fest. (Figur 11)
10. Sett håndtaket inn i åpningene på toppen av motorenheten, og fest det med skruene. Ikke stram for hardt. (Figur 12)
11. Heng holderen for tilbehør på krokene på bakenden av beholderen. (Figur 13)
12. Stikk den største enden av slangen inn i innsugningsåpningen foran på beholderen, og skru den på plass. (Figur 14)
13. Velg ønsket munnstykke og forlengerrør, og sett dem på slangen. (Figur 15)

Dobbel isolasjon eliminerer behovet for jording.















med klokken. (Figur 3)
4. For mer effektiv støvfiltrering kan du feste flensen på støvposen over inntaksåpningen. Pass på at du ikke skader posen. (Figur 4)
5. Sett motorenheten tilbake på beholderen slik at den passer med låseklemmene, og fest. (Figur 5)

INSTRUKSER FOR BRUK: TØRRSUGING

6. Stikk den største enden av slangen inn i innsugningsåpningen foran på beholderen og skru den på plass. Skyv forlengerrør eller munnstykker inn på den andre enden av slangen. (Figur 6)
7. Pass på at strømbryteren står på O (AV) før du plugger i strømmen. (Figur 7 & 8)
8. Slå på motoren ved å slå bryteren til I (PÅ). (Figur 9)
9. Når du er ferdig med å støvsuge, slå bryteren til O (AV) og trekk ut strømmen. (Figur 10 & 11)
10. For å trekke inn strømledningen, hold støpselet og trykk inn bryteren for inntrekking. Ikke la støpselet slenges fritt mens strømledningen trekkes inn. (Figur 12)

IKKE BRUK FILTERKASSETTEN VED VÅTSUGING!













TØRRSUGING

ADVARSEL: Sørg for å lese, forstå og følge informasjonen under 'SIKKERHETSINSTRUKSER OG ADVARSLER' før du begynner å bruke støvsugeren.
Støvsug aldri på steder med brannfarlig gass eller damp, eller eksplosivt støv, i luften.
Brannfarlig gass eller damp inkluderer, men er ikke begrenset til: lighterbrensel, løsemiddelbaserte rensemidler, oljebasert maling, bensin, alkohol og aerosolspray.
Eksplosivt støv inkluderer, men er ikke begrenset til: kull, magnesium, korn og krutt.
For å redusere faren for helseskader fra damp eller støv, må du aldri suge opp giftige stoffer.

1. Pass på at strømmen er koblet fra. (Figur 1)
2. For å forberede støvsugeren for tørrsuging, sjekk at filterkassetten sitter godt. Sørg for at filteret er skjøvet inn til det stopper mot motorenheten. (Figur 2) (Støvsugeren skal leveres med filterkassetten forhåndsinstallert, hvis ikke, se instrukser på side 9.)
3. Plasser filterholderen på toppen av filterkassetten og stram ved å vri håndtaket

VÅTSUGING

ADVARSEL: Sørg for å lese, forstå og følge informasjonen under 'SIKKERHETSINSTRUKSER OG ADVARSLER' før du begynner å bruke støvsugeren.
Støvsug aldri på steder med brannfarlig gass eller damp, eller eksplosivt støv, i luften.
Brannfarlig gass eller damp inkluderer, men er ikke begrenset til: lighterbrensel, løsemiddelbaserte rensemidler, oljebasert maling, bensin, alkohol og aerosolspray.
Eksplosivt støv inkluderer, men er ikke begrenset til: kull, magnesium, korn og krutt.
For å redusere faren for helseskader fra damp eller støv, må du aldri suge opp giftige stoffer.

1. Pass på at strømmen er koblet fra. Sørg for at beholderen er ren, og fri for støv og skitt. (Figur 1)
2. Ta ut filterkassetten og støvposen, og sett skumfilteret forsiktig på plass over filterburet. Sett motorenheten tilbake på beholderen. (Figur 2) Se instrukser på side 10.

IKKE BRUK FILTERKASSETTEN VED VÅTSUGING!

INSTRUKSER FOR BRUK: VÅTSUGING

3. Fest ønsket forlengerrør eller munnstykke på slangen. (Figur 3)
4. Pass på at strømbryteren står på O (AV) før du plugger i strømmen. (Figur 4 & 5)
5. Slå på motoren ved å slå bryteren til I (PÅ). (Figur 6)
6. Når du er ferdig med å støvsuge, slå bryteren til O (AV) og trekk ut strømmen. (Figur 7 & 8)
7. Tøm beholderen i en egnet beholder eller sluk. (Figur 9)
8. For å trekke inn strømledningen, hold støpselet og trykk inn bryteren for inntrekking. Ikke la støpselet slenges fritt mens strømledningen trekkes inn. (Figur 12)

VIKTIG! Når du suger opp store mengder væske, må ikke munnstykket senkes helt ned i væsken; la det være en åpning ved enden av munnstykket for å slippe gjennom luft. Maskinen er utstyrt med en flyteventil som stopper innsugingen når beholderen er full. Du vil merke en økning i motorhastigheten. Når dette skjer, slå av maskinen, koble fra strømmen, og tøm væsken i en egnet beholder eller sluk. For å fortsette å suge, sett på plass motorenheten igjen. Etter våtsuging, slå av maskinen og trekk ut strømmen. Tøm beholderen, og rengjør og tørk innsiden og utsiden av beholderen straks, før du setter unna støvsugeren.
HUSK! Skumfilteret må fjernes etter våtsuging, og en filterkassett må installeres før du kan tørrsuge igjen.

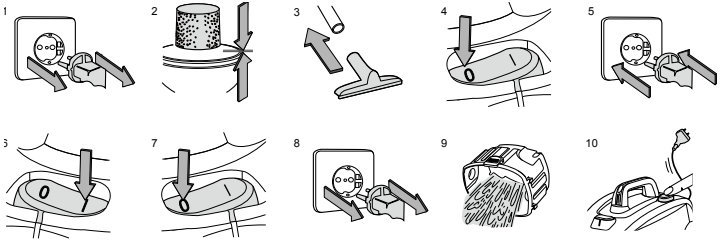

VEDLIKEHOLD

1. Pass på at strømmen er koblet fra. (Figur 1)
2. Koble slangen fra beholderen. (Figur 2)
3. Løsne alle klemmene og ta motorenheten av beholderen. (Figur 3)
4. Fjern alt skitt og rusk fra beholderen og slangen. (Figur 4)
5. Rengjør skumfilteret ved å vaske det med vann og mild såpe. (Figur 5)
6. Sjekk at slangen, munnstykkene og strømledning ikke er skadet.

VIKTIG! Rengjør eller skift filterkassetten jevnlig for best ytelse. BRUK ALLTID FILTERKASSETT VED TØRRSUGING. Hvis maskinen brukes uten filterkassetten, vil motoren brennes ut, og garantien oppheves. Pass på at du alltid har et reservefilter.
MERK! Filtrene som leveres med maskinen er laget av kvalitetsmaterialer beregnet på å stoppe små støvpartikler. Filterkassetten må kun brukes for tørrsuging. Filterkassetten må være tørr for å fange opp støv. Hvis filterkassetten er våt, vil den tette seg fort, og være svært vanskelig å

rengjøre. Håndter filteret med varsomhet ved rengjøring og bytting. Sjekk om det er små hull eller rifter i filtrene, et lite hull kan slippe gjennom støv. Ikke bruk et filter med hull eller rifter, bytt det straks.
ADVARSEL! TREKK ALLTID UT STRØMMEN FØR DU FJERNE MOTORENHETEN FRA BEHOLDEREN.

INSTALLASJON OG RENGJØRING AV FILTERKASSETT

INSTALLASJON AV FILTERKASSETT
1. Pass på at strømmen er koblet fra. (Figur 1)
2. Fjern motorenheten og plasser den opp ned.
3. Installer filterkassetten over filterburet og skyv filteret forsiktig inn til det stopper mot motorenheten. (Figur 2)
4. Plasser filterholderen på toppen av filterkassetten og fest ved å vri håndtaket med klokken. (Figur 3 & 4)

RENGJØRING AV FILTERKASSETT
1. Løsne og fjern filterholderen ved å vri håndtaket mot klokken.
2. Grip filterkassetten varsomt og trekk den opp. (Figur 5)
3. Rengjør filterkassetten ved å banke den lett, eller ved å børste vekk skitt. Rengjøring bør ikke gjøres innendørs i oppholdsrom. For optimal ytelse anbefales det å bytte filteret.
4. Sett inn rengjort eller nytt filter som beskrevet over i 'INSTALLASJON AV FILTERKASSETT'.
5. Våte filter bør fjernes og legges til tørk i 24 timer før de settes inn igjen.



INSTALLASJON OG RENGJØRING AV HEPA-FILTER
1. Pass på at strømmen er koblet fra. (Figur 1)
2. Åpne filterluken ved å løfte låsetappen opp og trekke ut filterluken. (Figur 2 & 3)
3. Fjern HEPA-filterkassetten fra støvsugeren. (Figur 4)
4. Rengjør filteret ved å børste av skitt. For optimal ytelse anbefales det å bytte filteret. (Figur 5)
5. Sett på plass nytt eller rengjort filter. (Figur 6)
6. Skyv tappene på filterlukene inn i hullene over filteret, og klikk filterluken på plass. (Figur 7 & 8)

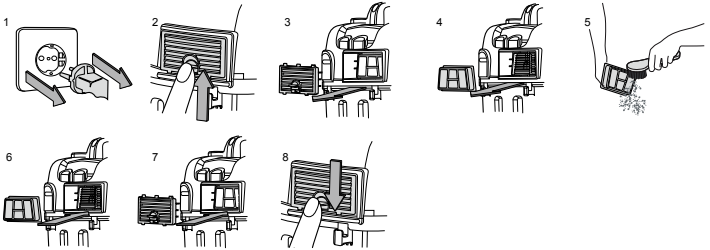

INSTALLASJON OG RENGJØRING AV SKUMFILTER

INSTALLASJON AV SKUMFILTER
1. Pass på at strømmen er koblet fra. (Figur 1)
2. Fjern motorenheten og plasser den opp ned. Følg instrukser for installasjon av filterkassett.
3. Skyv skumfilteret forsiktig ned over filterburet, og pass på at hele filterburet dekkes. (Figur 2 & 3)
4. Sett motorenheten tilbake på beholderen.

RENGJØRING AV SKUMFILTER
1. Plasser motorenheten opp ned, og fjern forsiktig skumfilteret. (Figur 4)
2. Bruk mildt såpevann for å vaske skumfilteret, og skyll med kaldt vann. (Figur 5)
3. La filteret tørke i luft før du setter det på plass og bruker støvsugeren igjen.

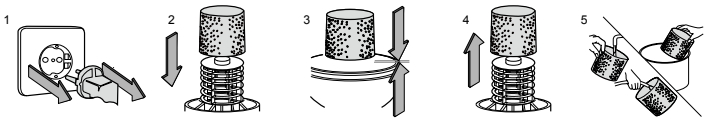

FEILSØKING

SYMPTOM	MULIG ÅRSAK	MULIG LØSNING
Støvsugeren starter ikke.	1) Får ikke strøm.	1) Sjekk strømforsyning – ledning, brytere, sikringer.
	2) Skade på strømledning.	2) Koble fra og sjekk strømledning. Hvis den er skadet, må den repareres av en elektriker.
	3) Full beholder.	3) Tøm beholderen.
Det kommer støv ut av motoren.	Filterkassetten mangler eller er skadet.	Sett inn eller bytt filterkassett.
Redusert effektivitet og vibrasjon fra motor.	1) Blokkering i munnstykke, slange eller innsugningsåpning.	1) Sjekk om munnstykke, slange eller innsugningsåpning er blokkert.
	2) Filterkassetten er tettet av fint støv.	2) Rengjør eller bytt filterkassett.

DELELISTE – DIAGRAM

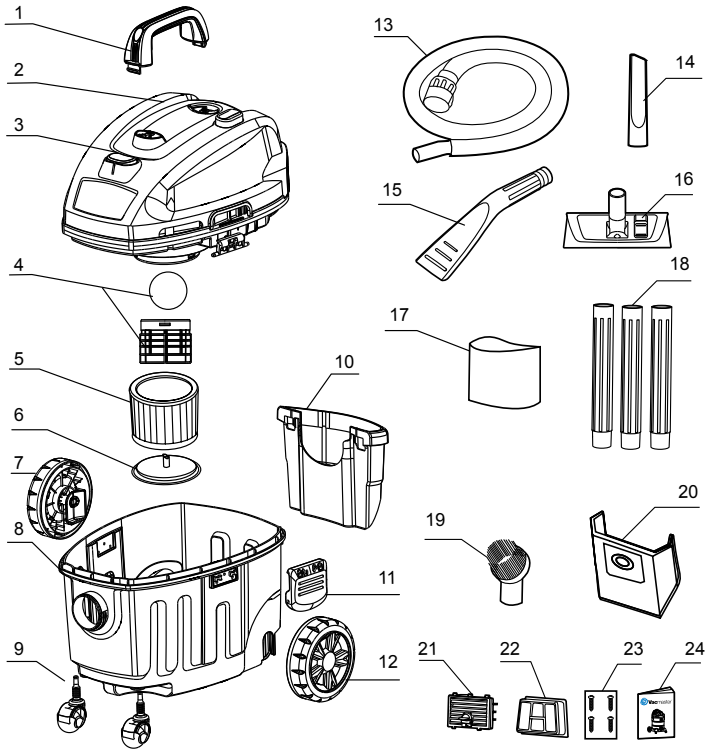

VF1515HJ Deleliste			
Nummer	**Navn**	**Beskrivelse**	**Antall**
1	GD41BX.40.01	Håndtak	1
2	VH60P1.16.00	Motorenhet	1
3	WODQ10.01.12	Motorbryter	1
4	VH60P1.17.00	Filterbur	1
5	FV9543.03.03	Innsatsfilter	1
6	FV9543.03.20		1
7	TVQTGL.17.00	Venstre bakhjul	1
8	VH60P1.20.01	Beholder	1
9	TVQTJL.08.00	Forhjul	2
10	FV9241.04.01	Holder for tilbehør	1
11	TVQTDK.11.00	Låseklemme	2
12	TVQTGL.18.00	Høyre bakhjul	1
13	FV8804.01.00	Slange	1
14	FV8772.02.01	Munnstykke for sprekker	1
15	FV8774.01.01	Munnstykke for bil	1
16	FV8721.05.00	Kombinert munnstykke for gulv	1
17	FV9502.06.01	Våtfilter	1
18	FV8903.01.01	Forlengerrør	3
19	FV8773.01.00	Rund børste	1
20	FV9641.03.00	Støvpose	1
21	VH60P1.11.00	HEPA filterluke	1
22	VE01PW.10.30	HEPA filter	1
23	BOA2ZZ.39.01	Skruer	4
24		Bruksanvisning	1